



DEUTSCH
ENGLISH
FRANÇAIS
NEDERLANDS
ITALIANO

ESPAÑOL
DANSK
NORSK
SVENSKA
SUOMI

Hersteller
Wörlein GmbH
Gewerbestr. 12
D 90556 Cadolzburg
GERMANY

Tel.: +49 9103/71670
Fax.: +49 9103/716712
Email: info@woerlein.com
Web: www.soundmaster.de



ENVIRONMENTAL PROTECTION



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.

 
	WARNING Risk of electric shock Do not open!	
Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.		



This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.



This symbol indicates the presence of important operating and maintenance instructions for the device



Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are legally obligated to return all batteries for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*)

Return batteries free of charge to public collection points in your community or shops selling batteries of the respective kind. Only return fully discharged batteries

*) marked Cd = cadmium, Hg = mercury, Pb = lead

- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!!
- Keep batteries away from children. Children might swallow batteries.
- Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION: Danger of explosion if battery is incorrectly replaced
- Replace only with the same or equivalent type

	CAUTION - INVISIBLE LASER RADIATION WHEN OPENING THE COVER OR PRESSING THE SAFETY INTERLOCK. AVOID EXPOSURE TO THE LASER BEAM.
--	---



To prevent possible hearing damage, do not listen at high volume levels for long periods

- Use the device in dry indoor environments only.
- Protect the device from humidity.
- This apparatus is for moderate climates areas use, not suitable for use in tropical climates countries.

- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug or an appliance coupler is used as the disconnect device, the disconnect devices shall remain readily operable.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
- Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- When you are necessary to ship the unit store it in its original package. Save the package for this purpose.
- In case of malfunction due to electrostatic discharge or fast transient (burst), remove and reconnect the power supply.
- If the unit is not using for a long period of time, disconnect it from the power supply by unplugging the power plug. This is to avoid the risk of fire.


TABLE OF CONTENTS

LOCATION OF CONTROLS	3
REMOTE CONTROL	4
Operating your Remote Control.....	4
Remote Control operation range	5
INSTALLATION.....	5
Content of delivery.....	5
AC power connection	5
BASIC OPERATIONS	6
Power ON/OFF	6
Selecting modes.....	6
Adjusting the volume	6
Mute	6
DAB	6
Full Scan	6
Selecting stations	6
Manual tune.....	7
Presets	7
DAB Information	8
Prune (remove stations that are listed but not available).....	8
Dynamic range compression (DRC)	8
FM.....	8
Scan for a station in FM mode.....	8
Presets	8
FM Information	9
Scan settings.....	9
Audio settings.....	9
CD.....	9
CD playing.....	9
Resume function.....	10
Skip search and search	10
Repeat mode.....	10
Random mode	10
Intro function.....	10
Program mode.....	10

USB	10
USB playing.....	11
Resume function.....	11
Skip search and search	11
Repeat mode.....	11
Random mode.....	11
Intro function.....	11
Program mode.....	11
BLUETOOTH®	12
Pair Bluetooth devices.....	12
AUX-IN	13
SOUND QUALITY	13
Adjust Bass or Treble (My EQ)	13
Preset Equalizer	13
SLEEP TIMER	13
Activate the Sleep timer.....	13
Show the remaining sleep time	13
Cancel the sleep timer.....	13
ALARM	13
HEADPHONE	14
SYSTEM SETTINGS	14
Theme	14
Night Mode	14
Equaliser	14
Time/Date.....	14
Backlight.....	14
Language	14
Factory Reset	14
Software Update.....	14
Software Version	14
TECHNICAL SPECIFICATION	15


LOCATION OF CONTROLS

FRONT VIEW

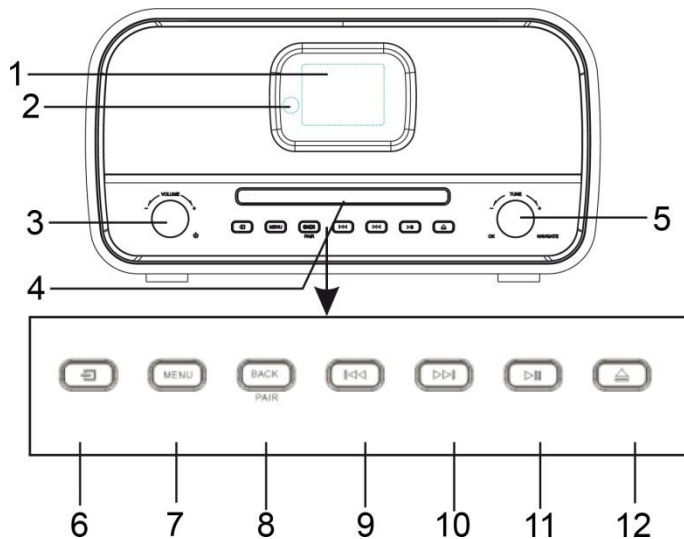

- | | |
|---|--|
| <ul style="list-style-type: none"> 1 Display 2 Remote Sensor 3 ⏻, VOL+ / VOL- knob 4 Disc tray 5 Navigate / OK knob 6 📶 Source button | <ul style="list-style-type: none"> 7 MENU button 8 BACK / PAIR button 9 ⏮ button 10 ⏭ button 11 ▶⏪ PLAY / PAUSE button 12 ▲ Eject button |
|---|--|


BACK VIEW

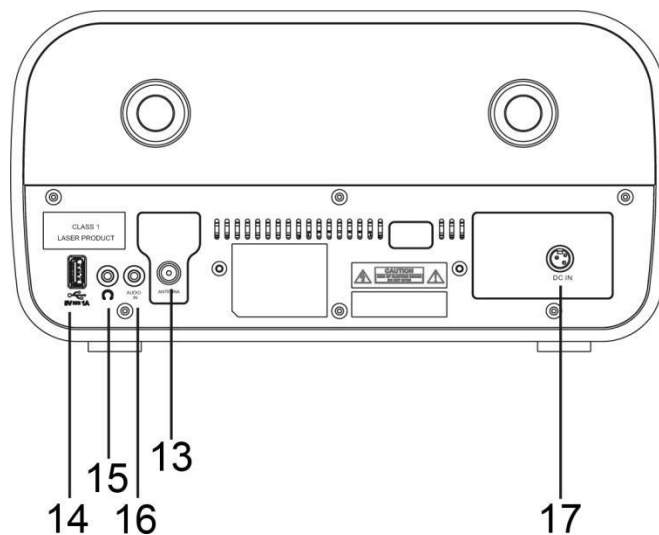

- | | |
|---|---|
| <ul style="list-style-type: none"> 13 Antenna socket 14 USB socket 15 Headphone jack | <ul style="list-style-type: none"> 16 AUX IN jack 17 DC input |
|---|---|


REMOTE CONTROL

- 1 ⏻ Standby / ON button
- 2 INTRO / AMS button
- 3 REPEAT button
- 4 EQ button
- 5 BASS +/- button
- 6 USER button
- 7 MENU button
- 8 ▲ button
- 9 ⏮ button
- 10 ■ button
- 11 P +/- button
- 12 0-9 Numbers
- 13 INFO button
- 14 ▲ button
- 15 SLEEP button
- 16 Function buttons (CD/USB/DAB/FM/BT/AUDIO)
- 17 RANDOM button
- 18 TREBLE +/- button
- 19 PROGRAM button
- 20 ↻ / PAIR button
- 21 ▶▶ / OK button
- 22 ▶▶ button
- 23 ▼ button
- 24 ✖ button
- 25 SET / CLOCK button
- 26 V +/- button
- 27 TIMER button
- 28 DIM button

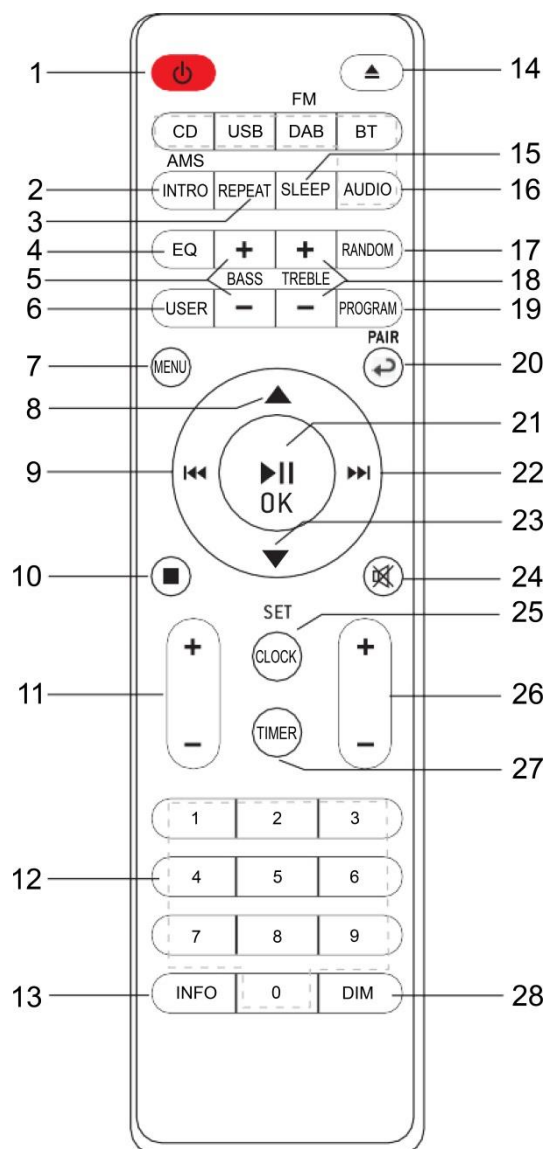


Operating your Remote Control

1. Press and slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure that the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment.

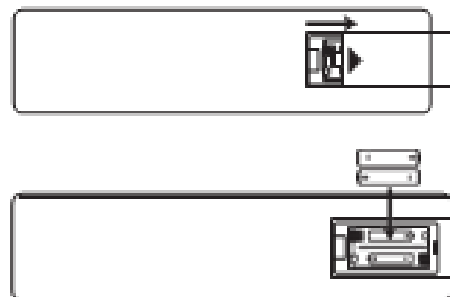

Remote Control operation range

Point the remote control at the unit no more than 5 meters from the remote control sensor and within 60° horizontally and 20° vertically of the front of the unit. The operating distance may vary depending on the brightness of the room.

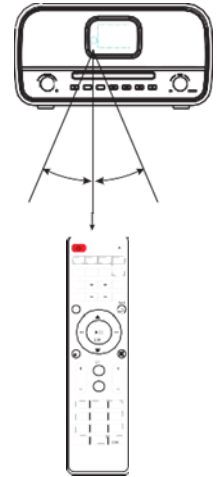

NOTE:

- Make sure that there is no obstacle between the remote sensor of the unit and remote control. If you install the unit on a TV stand, etc., the remote control range may decrease depending on the thickness or color of the glass of the TV stand.
- Do not expose the infrared remote sensor to direct sunlight or other strong light, such as inverter fluorescent light.

INSTALLATION


Content of delivery

- | | |
|----------------------|------------------|
| ➤ Main Unit | ➤ Remote Control |
| ➤ Instruction Manual | ➤ Power Adaptor |
| ➤ 2 x AAA Batteries | ➤ Antenna |

AC power connection

Caution:

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the rating label of the AC adapter.
- Before connecting the AC power cable, ensure that you have completed all other connections.
- Connect the small end of AC socket at the back of unit and insert the plug of the AC power cable into a standard AC wall outlet.
- Be sure to unplug the power cable from the outlet when the system is not in use for an extended period of time.
- The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.




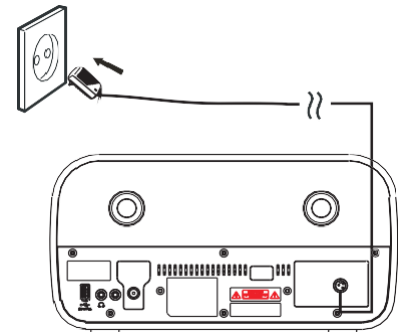


ERP power management


The unit will turn off automatically after 20 minutes in standby mode if there is no audio signal. To turn on the unit again press the “⏻” button.

BASIC OPERATIONS

    Power ON/OFF

Press the “” knob on the unit or the “” button on the remote control to turn the unit on.
Press again the “” knob or the “” button on the remote control to turn the unit off.

 Selecting modes

During on mode, press the “” button on the unit repeatedly to switch between the modes or press the desired function on the remote control.


Adjusting the volume


Rotate the “**VOLUME**” knob on the unit or press the “**V +/-**” button on the remote control to decrease or increase the volume.

NOTE:

If you adjust the volume above 26, then power off and power on again, the volume will restore to the factory setting automatically.

Mute

 
During playing mode, press the “” button on the remote control, the sound will not be heard from the speaker.

Press the “” button again, the “**V +/-**” button on the remote control or rotate the “**VOLUME**” knob to cancel the mute function. The sound can be heard from the speakers again .

DAB

The first time you use the unit, or if the station list is empty, the radio automatically performs a full scan to see what stations are available. You may also need to start a scan manually to update the list of stations for one of the following reasons:

- New stations may become available from time to time.
- Stations close or can no longer be received (In the station list, invalid stations are indicated with a question mark in front of their name).
- If reception was not good after the original scan (for example the antenna was not up), this may result in an empty or incomplete list of available stations.
- If you have poor reception of some stations causing the audio to break up, you may wish to list only stations with good signal strength.

Press the “” button repeatedly on the unit or press the “**DAB**” button on the remote control until “DAB” is displayed to select the DAB function.

Full Scan

Press the “**MENU**” button, select with the “**▼ / ▲**” buttons the function “Full scan” and press the “**OK**” button to confirm. The unit starts a complete scan. Once a scan is complete, the radio returns to playing the previously selected station or first station on the station list.

Selecting stations

1. Use the “**▼ / ▲**” button on the remote control or rotate the “**NAVIGATE**” button on the unit to scroll through the list of station.
2. Press “**OK**” on the remote control or on the unit to change station.

Some stations are secondary services associated with a Primary channel and only available at certain times. Any station that has associated secondary services is indicated with a double chevron pointing to the right. The Secondary radio station stations are always listed next to their primary station rather than the normal is indicated with a double chevron pointing left.

Manual tune

As well as the normal method of scanning, you can also manually tune to a particular channel /frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list.

1. Press “**MENU**” button on the unit or remote control.
2. Select “Manual tune” and press “**OK**” to confirm.
3. Use the “**▼ / ▲**” button on the remote control or rotate the “**NAVIGATE**” knob on the unit to display a particular channel/frequency and press the “**OK**” button on the remote control or on the unit to tune the selected channel/frequency.
4. The display shows a live indication of the received signal strength on the selected frequency.
5. Adjustments to your antenna will be manifested in the received signal strength displayed.

Note:

The slightly larger rectangle indicates the audio quality threshold - if the signal strength, as indicated by the solid rectangles, falls below this threshold the audio quality will deteriorate. At the same time the unit scans for any DAB stations on the selected frequency and updates the station list with any new stations found. To listen to any stations found, return to the “Now playing” screen and select the required station from the station list as normal.

Presets

The unit has 40 preset memories for DAB.

Store a station in a preset memory

1. Select the desired station.
2. Press and hold the “**PROGRAM**” button on the remote control about 3~5 seconds until the display shows “Preset Store”. Presets (1-40) are displayed as either “Empty” or with the currently stored station name.
3. Use the “**▼ / ▲**” button on the remote control or rotate the “**NAVIGATE**” knob on the unit to choose a preset memory, then press the “**OK**” on the remote control or on unit to store the currently playing station. After confirming the preset station is stored, the display reverts to the “Now playing” screen.

Note:

If a preset memory is already occupied, you can simply replace the old one with the new one. It is not necessary to delete the old preset station.

Recall a preset station

Press the “**PROGRAM**” button briefly, the display will show “Preset Recall”. Select one of the listed preset stations by using the “**▼ / ▲**” buttons on the remote control or rotate the “**NAVIGATE**” button on unit. Then press the “**OK**” button on the remote control or on the unit to choose the selected preset station.

DAB Information

While a station is playing, the screen shows the station name and DLS (Dynamic Label Segment) information broadcast by the station such as program name, track title and contact details. Long DLS info, over 16 characters scrolls across.

Each time you press the **"INFO"** button, the next set of information is displayed, cycling through: DLS text, DL Plus information (this is only displayed if broadcast by the station), signal strength, program type, ensemble name, channel number/frequency, signal error rate, bit rate, DAB variant, time and date.

Note: DL Plus presents additional information that can be broadcast by stations and stored temporarily on your radio. To return to the default "Now playing" screen at any time, press and hold the **"INFO"** button.

Prune (remove stations that are listed but not available)

Press the **"MENU"** button, select the function "Prune Invalid" and press the **"OK"** button to confirm.

This removes all invalid stations, indicated in the station list with a "?" in front of the station name.

Dynamic range compression (DRC)

This function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder, and loud sounds comparatively quieter.

Note: DRC only works if it is enabled by the broadcaster for a specific station

Change the DRC setting

1. Press the **"MENU"** button on the remote control or on the unit
2. Select "DRC" and press **"OK"** to confirm.
3. Select one of the available options: DRC off | low | high .

FM

FM radio mode receives analogue radio from the FM band and displays RDS (Radio Data System) information about the station and show (where broadcast).

Press repeatedly the **"↵"** button on the unit or the **"DAB"** button on the remote control until "FM" is displayed to select the FM function.

Scan for a station in FM mode

Automatic scan

Press the **"INTRO/AMS"** button on the remote control. The unit scans up through the FM band frequencies, showing the current frequency on the screen display. The found radio stations will be stored in the station list.

Manual scan

Press the **"◀ / ▶"** buttons on the remote control or unit to tune manually in 50 kHz steps.

Presets

The unit has 40 preset memories for FM, which works in the same way as DAB mode presets.

FM Information

While FM radio is playing, the screen shows the frequency of the radio station or if RDS information is available, the station name and any further “Radio Text” information.

If no information is available just the frequency, a “NO Radio Text” message is shown.

Each time you press the “**INFO**” button, the next set of information is displayed, cycling through: RDS Radio Text, program type, frequency, mono/stereo, time and date. To return to the default “Now playing” screen, press and hold the “**INFO**” button.

Scan settings

By default, FM scans stop at any available station (ALL Stations). This may result in poor quality audio from weak stations. The options are: All stations | Strong stations only.

To change the scan settings, to stop only at stations with good signal strength:

1. Press the “**MENU**” button on the remote control or unit.
2. Select “Scan setting”, press “**OK**” to confirm and then select “Strong stations only”. Press the “**OK**” button again to confirm.

Audio settings




By default, all stereo stations are reproduced in stereo. For weak stations, this may result in poor quality audio. The audio quality can be improved using mono. In the “Audio Setting” menu, the options are: Stereo allowed | Forced mono

Play weak stations in mono:

1. Press the “**MENU**” button on the remote control or unit.
2. Select “Audio setting”, press “**OK**” to confirm and then select “Forced mono”. Press the “**OK**” button again to confirm.

 



 

CD

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable - Audio/MP3/WMA)		AUDIO/MP3/WMA
CD-RW (CD-Rewritable - Audio/MP3/WMA)		AUDIO/MP3/WMA
AUDIO-CD (Compact Disc Digital Audio)		AUDIO

Note: Some recorded files may not be able to be played due to the type and format of disc or condition of the recording.

CD playing

1. Press the “” button repeatedly on the unit or press the “**CD**” button on the remote control until “CD” is displayed to select the CD function.
2. Press the “” button to open the disc tray and put the disc on the disc tray (with the printed side faced up) .
3. Press the “” again to close the disc tray. The unit will start the playback of the disc automatically.
4. Press the “” button to pause the playback.
5. To resume playback, press the “” button again.
6. Press the “” button on the remote control to stop the disc playing.

Note: While the CD is playing, the current track number and elapsed time will be displayed.

Resume function




You can pause and resume playback from the point where playback stopped (RESUME) by pressing the “■” button and turning off the power or switching functions. If you press the “■” button and then the “▶|” button again, playback starts again from the beginning (track 1).

Skip search and search

- Press the “◀◀” button once or more to skip backward one or more tracks on the disc.
- Press the “▶▶” button once or more to skip forward one or more tracks on the disc.
- Press and hold the “◀◀” button on the remote control to search backward for the track position that you want to start playing from.
- Press and hold the “▶▶” button on the remote control to search forward for the track position that you want to start playing from.


Repeat mode

Press the “REPEAT” button repeatedly on the remote control to set the following repeat modes:

-  = Repeat the current played track
-  = Repeat folder
-  = Repeat all

No icon = Normal play mode

Random mode

Press the “RANDOM” button the remote control to activate the random mode The random icon  will show in the display. To de-activate the random mode, press the “RANDOM” button again.

Intro function

Press the “INTRO” button on the remote control to start play the beginning of each track consecutively from first song. The playing time of each track is 10 seconds. When you hear the desired track, press the “▶|” button twice.

Program mode



1. When playing music, press the “■” button on the remote control.
2. Then press the “PROGRAM” button, then the information “P01 T01” will be displayed on the screen.
3. Choose the desired track with the buttons “◀◀” or “▶▶” to store as P01, P02 etc.
4. Press the “PROGRAM” button to confirm the selected track and go to the next program setting.
5. After finished setting, press the “▶|” button to finalize and start the programmed playback.
6. In program playback, the numbers on the remote control are invalid. You can only press the “◀◀/▶▶” buttons to change the tracks.
7. Change the source or press the “■” button twice to clear the program setting.

Note: You can store up to 20 tracks!

USB

Connect a USB mass storage device (including USB flash memory, USB flash players or memory cards) to this unit to enjoy the device’s stored music through the powerful speakers of this unit.

USB playing

1. Insert the USB device into the USB port  at the rear side of the unit.
2. Press the “” button repeatedly on the unit or press the “**USB**” button on the remote control until “USB” is displayed to select the USB function.
3. The playback will start automatically.

Resume function

This function works in the same way as in CD mode.

Skip search and search

This function works in the same way as in CD mode.

Repeat mode

This function works in the same way as in CD mode.

Random mode

This function works in the same way as in CD mode.

Intro function


This function works in the same way as in CD mode.

Program mode

This function works in the same way as in CD mode.

For devices with a USB cable

1. Insert the plug of the USB cable (not supplied) into the USB socket at the rear side of the unit.
2. Insert the other plug of the USB cable into the output terminal of the USB device.

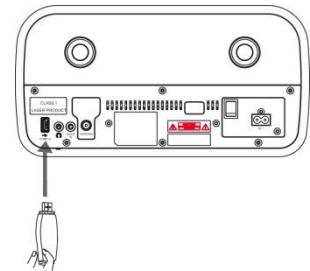

USB charging (5V 1A socket only)

You can plug an USB cable in the USB socket to charge the mobile device.

Note:

If the USB device is corrupted, this unit will not be able to detect and play the music stored. Format the USB mass storage device and restore the music on the device with a computer.

BLUETOOTH®

You can listen to tracks from a media device if it is connected to the unit via Bluetooth. You need to pair your Bluetooth device with this unit before you connect them for the first time.

Pair Bluetooth devices

Note:

- The operational range between this unit and a Bluetooth device is approximately 10 meters (without any object between the Bluetooth device and the unit).
 - Before you connect a Bluetooth device to this unit, ensure that you know the device's capabilities.
 - Any obstacle between this unit and the Bluetooth device can reduce the operational range.
 - If the signal strength is weak, your Bluetooth device may disconnect, but it will re-enter automatically into pairing mode.
1. Press the "☰" button repeatedly on the unit or press the "BT" button on the remote control until "Bluetooth" is displayed to select the Bluetooth function. If the unit is not paired to any Bluetooth device, the system enters automatically into pairing mode; or you need to press and hold the "PAIR" button to start pairing.
 2. Activate the Bluetooth function on your device and select the search mode. "DAB970" will appear on your Bluetooth device.
 3. To disconnect the Bluetooth function, switch to another function on the unit or disable the function from your Bluetooth device.

Tips:

- If there is already an existing connection, press the "PAIR" button to re-activate the pairing mode. The existing connection will be interrupted.
- The unit will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this unit, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, check if the device is still connected to the unit.
- If the connection is lost, follow the above instructions to pair your device again to the unit.

Listen Music from your Bluetooth device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to music stored on the device through this unit.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use this unit's remote control to play music stored on the device.
1. Pair your device with this unit.
 2. Play music via your device (if it supports A2DP).
 3. Use supplied remote control to control play (if it supports AVRCP).
 - To pause/resume play, press the "⏸" button.
 - To skip to a track, press the "⏮" or "⏭" buttons.

AUX-IN

1. Plug the 3.5mm AUX cable (not included) into the "AUDIO IN" jack at the back side of the unit.
2. Press the "⏮" button repeatedly on the unit or press the "AUDIO" button on the remote control until "AUX IN" is displayed to select the AUX IN function.
3. Start the playback of your external device.
4. Press the "V +/-" button on the remote control or rotate the "VOLUME" knob on the unit to adjust the desired volume.

SOUND QUALITY

Adjust Bass or Treble (My EQ)

1. Press the "USER" button on the remote control.
2. Then press the "Treble +/-" or "Bass +/-" buttons on the remote control to increase/decrease the function.

Preset Equalizer

Press the "EQ" button on the remote control. Select the desired sound characteristics such as Normal / Classic / Jazz / Pop / Rock /MY EQ with the "▼ / ▲" buttons on the remote control and press the "EQ" button to confirm.

SLEEP TIMER

Activate the Sleep timer

To set the sleep timer press the "SLEEP" button on the remote control repeatedly, it changes the number of minutes shown on the display in this sequence:

OFF → 15 → 30 → 45 → 60 → 90

Show the remaining sleep time

When the "SLEEP" button on the remote control is pressed once, the remaining sleep time is displayed. Wait for a second until the display returns to the original display.

Cancel the sleep timer

Press the "SLEEP" button repeatedly on the remote control until "off" is displayed.

ALARM

The clock must be correctly set for the alarm to operate correctly.

1. Press the "TIMER" button to enter the timer function.
2. Select "Alarm 1" or "Alarm 2" with the "▼ / ▲" buttons and press "OK".
3. Select and adjust the following points: Alarm On/Off, Frequency, Date/Time, Source, Duration, Volume. Enter each point by pressing the "OK" button.

Note: If Digital Radio or FM is selected as the alarm source, the next menu item is the selection of the desired station.

HEADPHONE

Connect the headphone to the headphone jack on the back side of the unit. The sound through the speakers is no longer audible.

SYSTEM SETTINGS

Press the “**MENU**” button, select “System Settings” and press “**OK**” to confirm. You find the following settings there:

Theme

Adjust the background color.

Night Mode

Activate or de-activate the night mode, adjust the time when the night mode should work.

Equaliser

Adjust 5 preinstalled sound settings or MyEQ.

Time/Date

- Set Time/Date: Adjust manually the time and date.
- Auto Update: Adjust the source for time and date update, de-activate the update function.
- Set 12/24 Hour: Set the time format.
- Set Date Format: Set the date format.
- Clock Style: Adjust 4 different clock styles in standby mode.

Backlight

Adjust the timeout level and the display backlight in standby and on mode.

Language

Adjust the menu language.

Factory Reset

Reset the unit and delete all settings.

Software Update

Install a new software on the unit. A software update is only possible via USB.

NOTE: Before starting a software upgrade, ensure that DAB970BR is plugged into a stable main power connection. Disconnecting power during an upgrade may permanently damage the unit.

Software Version

Display the current installed software version.

TECHNICAL SPECIFICATION

Power supply	:	Use only the supplied power adapter
Power input	:	100-240V~ 50/60Hz
Power output	:	18V $\overline{\text{---}}$ 1.2A
USB socket	:	5V $\overline{\text{---}}$ 1A
DAB+ range	:	174.928 – 239.200 MHz
FM range	:	87.5 – 108MHz
Preset Stations	:	40 DAB+, 40 FM
Bluetooth version	:	V2.1 + EDR
Audio power output	:	2 x 15 W RMS

Technical changes and misprints reserved.

Copyright by Woerlein GmbH, 90556 Cadolzburg, www.soundmaster.de

Duplication only with the permission of Woerlein GmbH



HERSTELLER / IMPORTEUR

Wörlein GmbH
Gewerbestraße 12
D 90556 Cadolzburg, Germany

Tel: +49 9103 71 67 0
Fax: +49 9103 71 67 12
E-Mail: info@woerlein.com

Hiermit bestätigt Wörlein GmbH, dass sich dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet.

Eine Kopie der Konformitätserklärung kann unter obenstehender Adresse bezogen werden.

Hereby, Wörlein GmbH declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

A copy of the declaration of conformity can be obtained from the above address.

Par la présente, Wörlein GmbH déclare que cet appareil est conforme aux exigences principales et autres clauses applicables de la Directive 2014/53/EU.

Une copie de la déclaration de conformité peut être obtenue à l'adresse ci-dessus.

Wörlein GmbH verklaart hierbij dat dit apparaat in overeenkomst is met de essentiële vereisten en andere relevante bepalingen van de Richtlijn 2014/53/EU.

Een kopie van de conformiteitsverklaring kunt u verkrijgen op het hierboven vermelde adres.

Con la presente, Wörlein GmbH dichiara che questo dispositivo è conforme ai requisiti essenziali e altre disposizioni contenute nella Direttiva 2014/53/EU.

Una copia della dichiarazione di conformità può essere richiesta all'indirizzo sopra indicato.

Härmed Wörlein GmbH deklarerar att denna enhet är i överensstämmelse med de grundläggande kraven och andra relevanta bestämmelser i direktiv 2014/53/EU.

En kopia av försäkran om överensstämmelse kan erhållas från ovanstående adress.

Herved Wörlein GmbH erklærer, at denne enhed er i overensstemmelse med de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.

En kopi af overensstemmelseserklæringen kan hentes fra ovennævnte adresse.

Tímto Wörlein GmbH prohlašuje, že toto zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.

Kopii prohlášení o shodě lze získat na výše uvedené adrese.

Por este meio, Wörlein GmbH declara que este dispositivo está em conformidade com os requisitos essenciais e outras disposições da Directiva 2014/53/EU.

Uma cópia da declaração de conformidade pode ser obtida no endereço acima.

Wörlein GmbH confirma que este dispositivo cumple con los requisitos esenciales y otras disposiciones relevantes de la Directiva 2014/53 / UE.

Se puede obtener una copia de la declaración de conformidad en la dirección anterior.

Wörlein GmbH týmto potvrdzuje, že toto zariadenie je v súlade so základnými požiadavkami a ďalšími príslušnými ustanoveniami smernice 2014/53 / EÚ.

Kópiu vyhlásenia o zhode je možné získať na uvedenej adrese.

Wörlein GmbH potrjuje, da je ta naprava v skladu z bistvenimi zahtevami in drugimi ustreznimi določbami Direktive 2014/53 / EU.

Kopijo izjave o skladnosti je mogoče dobiti na zgornjem naslovu.

Wörlein GmbH confirmă prin prezenta că acest dispozitiv respectă cerințele esențiale și alte prevederi relevante ale Directivei 2014/53 / UE.

O copie a declarației de conformitate poate fi obținută de la adresa de mai sus.

Wörlein GmbH patvirtina, kad šis prietaisas atitinka esminius reikalavimus ir kitas atitinkamas Direktyvos 2014/53 / ES nuostatas.

Atitikties deklaracijos kopiją galima gauti iš pirmiau nurodyto adreso.

A Wörlein GmbH megerősíti, hogy ez az eszköz megfelel a 2014/53 / EU irányelv alapvető követelményeinek és egyéb vonatkozó rendelkezéseinek.

A megfeleléségi nyilatkozat egy példányát a fenti címről szerezheti be.

Wörlein GmbH potvůrzdava, che tova ustrořstvo e v sůotvet-stvie sůs sůshtestvenite iziskvaniya i drugi prilozhimi razporedbi na Direktiva 2014/53 / ES. Kopie ot deklaratsiyata za sůotvet-stvie mozhe da bůde polucheno ot goreposocheniya adres.

Wörlein GmbH kinnitab käesolevaga, et see seade vastab direktiivi 2014/53 / EL olulistele nõuetele ja muudele asjakohastele sätetele.

Vastavusdeklaratsiooni koopiat saab eespool nimetatud aadressilt.

Wörlein GmbH vahvistaa, että tämä laite on direktiivin 2014/53 / EU olennaisten vaatimusten ja muiden asiaa koskevien säännösten mukainen.

Kopio vaatimustenmukaisuusvakuutuksesta on saatavissa edellä mainitusta osoitteesta.

Ar šo Wörlein GmbH apstiprina, ka šī ierīce atbilst Direktīvas 2014/53 / ES būtiskajām prasībām un citiem attiecīgajiem noteikumiem.

Atbilstības deklarācijas kopiju var iegūt, izmantojot iepriekš minēto adresi.

Wörlein GmbH bekræfter herved at denne enheten er i samsvar med de vesentlige kravene og andre relevante bestemmelser i direktiv 2014/53 / EU.

En kopi av samsvarserklæringen kan fås fra adressen ovenfor.

Wörlein GmbH niniejszym potwierdza, że to urządzenie jest zgodne z zasadniczymi wymaganiami i innymi stosownymi postanowieniami dyrektywy 2014/53 / UE.

Kopię deklaracji zgodności można uzyskać pod powyższym adresem.